



CURRENT THERMOSTAT

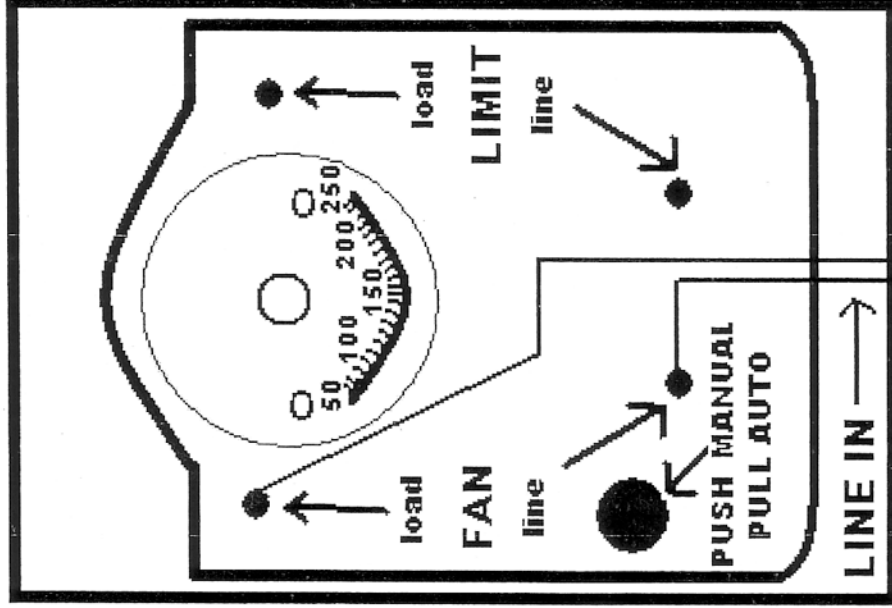

PUSH BUTTON STYLE

OLD THERMOSTAT

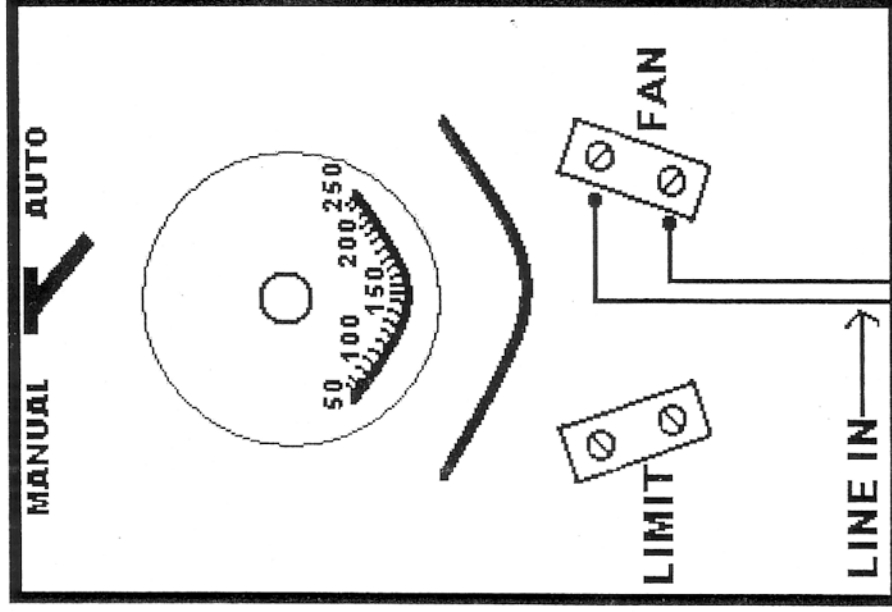

SELECTOR SWITCH STYLE

NOTE: TO CHANGE OVER TO THE PUSH BUTTON STYLE THERMOSTAT CUT THE EYELETS OFF AS CLOSE TO THE CONNECTOR AS POSSIBLE LEAVING AS MUCH WIRE AS YOU CAN. THEN STRIP THE WIRE JACKET BACK 1/4". NEXT INSERT THE WIRES INTO THE QUICK CONNECTS ON YOUR NEW THERMOSTAT.